

Installing the FotoZap® Uploader on the SD Card

New FotoZap® Cameras come with latest version of the FotoZap Uploader (currently version 2.1) already installed on the SD Memory Card.

If necessary you can download the FotoZap® Uploader by following these instructions:




Step 1: LOGIN

Go here to visit a page where you can download the FotoZap® Uploader:


<http://support.picturemarketing.com/uploader>

At that page click [the link](#) to start the download.

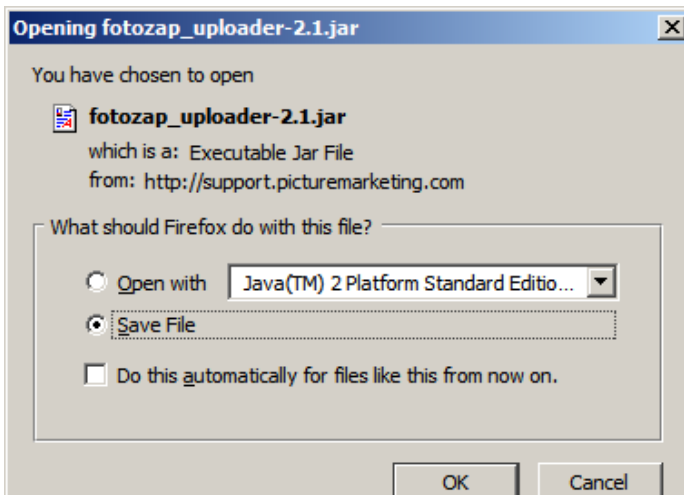

Step 2: FOTOZAP UPLOADER

When the File Download dialog appears, click to Save the file.

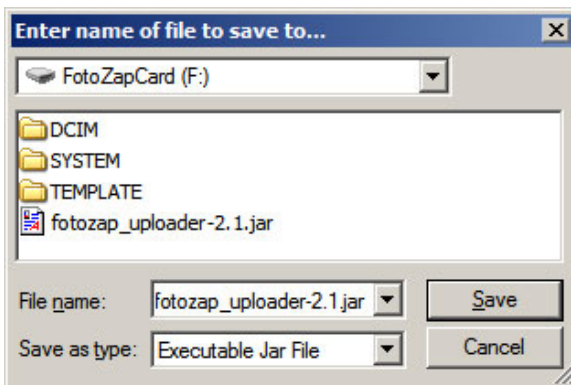

Step 3: CHOOSE DESTINATION

Navigate to the SD Memory Card drive on your computer (this will appear when the Memory Card is inserted into your computer's USB slot using the Memory Card Reader).

Then click Save to save the program to the main level of your memory card.

Then, run the Uploader from this location to download the Campaign List.

You will also need to download the Uploader if you have to purchase a new SD Memory Card:

In this case, you will first need to Format the card. To format the card, put the card into the camera, and then turn on the camera. Click on the MENU/OK button to get to the menu, and then click on the right arrow key in the circle of keys to get to SETUP. Click the down arrow to highlight FORMAT (CARD) and then click the right arrow. You will see the message: ALL DATA WILL BE ERASED. Highlight YES and then click the "OK" button.